




CameraPixels
2021.5

Quick User Guide

MAIN SCREEN UI elements

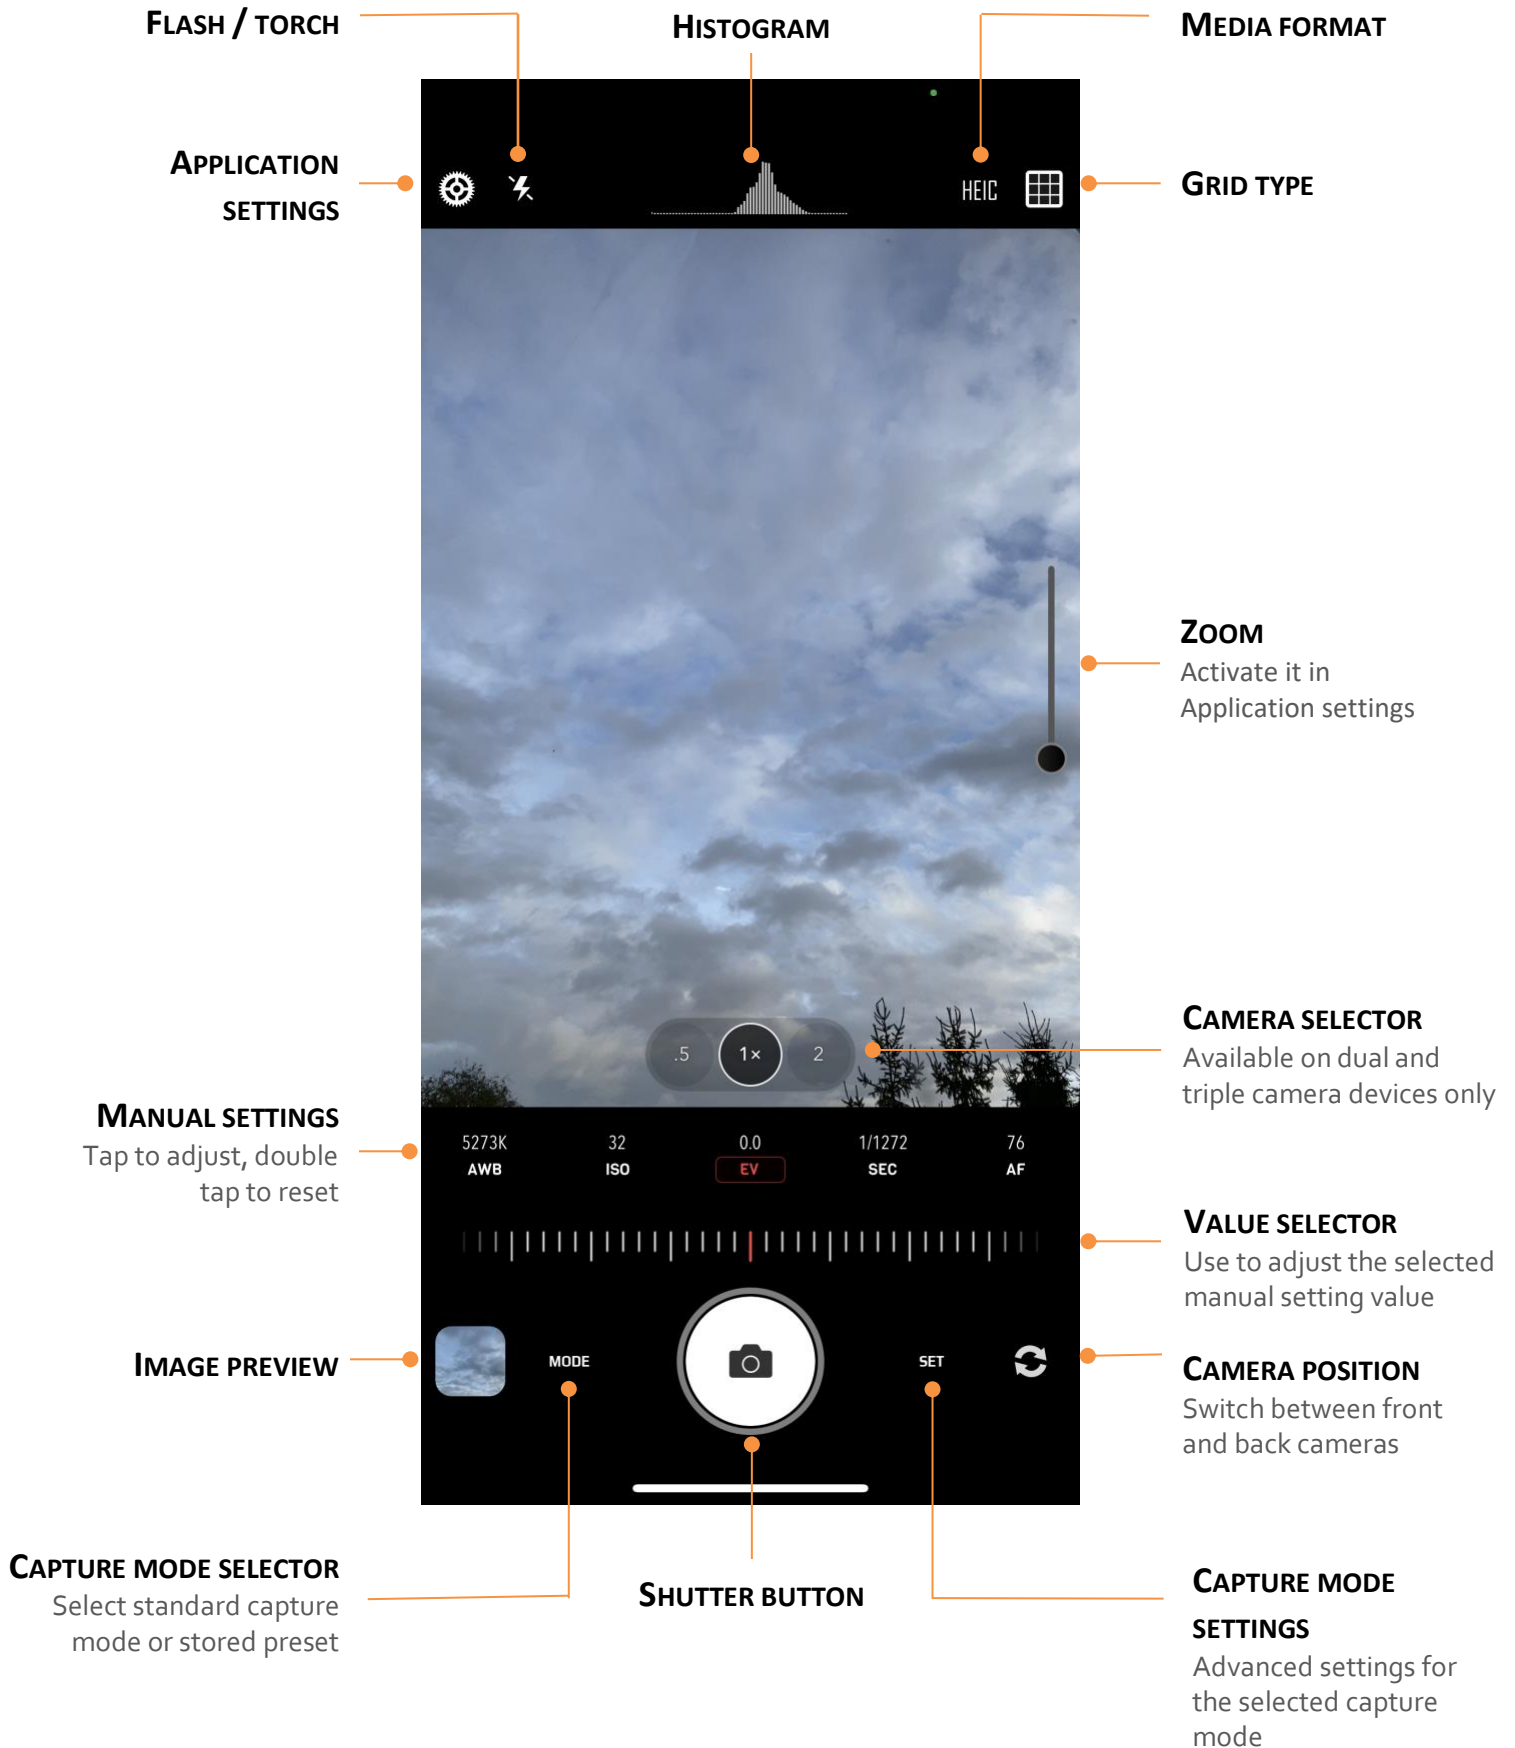


MAIN SCREEN

UI shortcuts

HISTOGRAM

Tap the histogram to activate or deactivate the clipping warnings

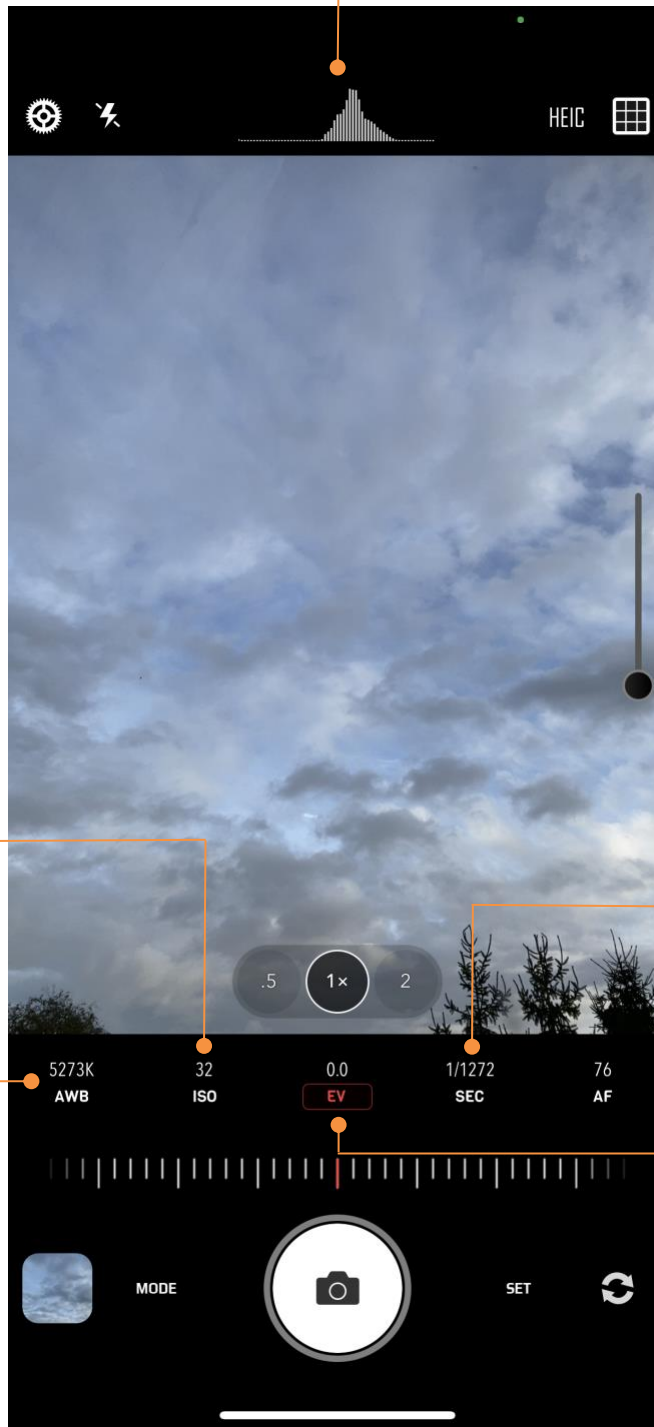

ISO

Long press to activate ISO-priority mode. Activate priority modes in Application settings first

WHITE BALANCE

Long press to access the white balance presets and tint

SHUTTER SPEED


Long press to activate Shutter-priority mode. Activate priority modes in Application settings first

EV BIAS

Long press to activate Auto-exposure mode

VIEWFINDER


Change focus and exposure points

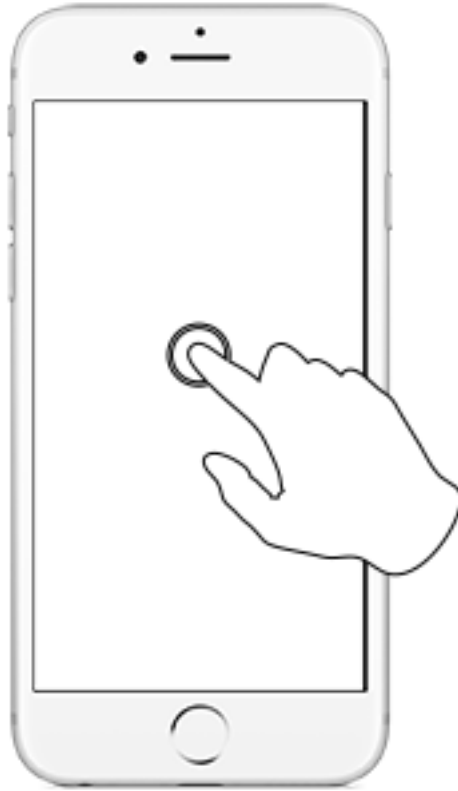

Use a single tap on the viewfinder to change focus and exposure points. By default, focus and exposure are measured at the same point and therefore tapping on the viewfinder with a single finger will update both of them simultaneously. While not locked, the focus and exposure are updated automatically when changes in the scene are detected.

VIEWFINDER

Separate focus and exposure points

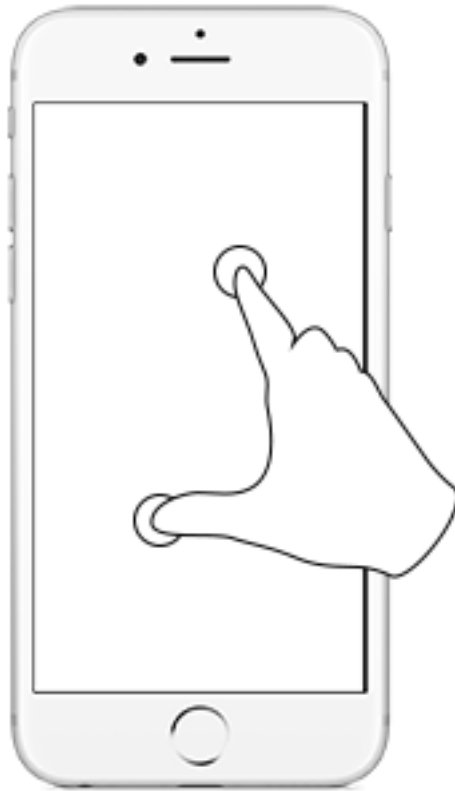


Tap with two fingers on the viewfinder to separate focus and exposure points. Once separated, focus and exposure points can be adjusted independently by dragging the corresponding reticle.

NOTE: Tapping with a single finger on the viewfinder automatically resets separated focus and exposure points back to one.

VIEWFINDER

Reset focus and exposure points

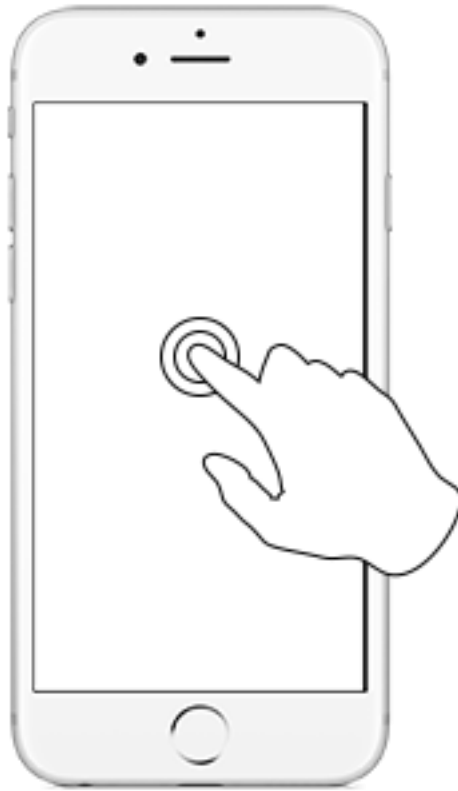


A double tap with a single finger on the viewfinder resets both, focus and exposure points to their default position in the middle of the viewfinder.

MANUAL SETTINGS

Auto mode

When CameraPixels is launched, it uses auto-settings for exposure, focus and white balance. All settings are updated in real-time, so you can always see the state of your camera.

Auto-mode:

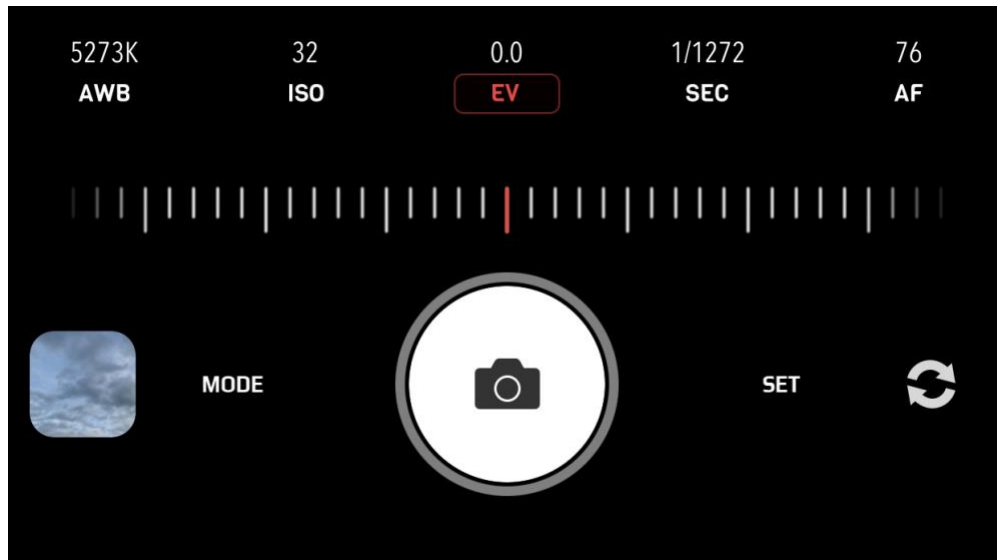


NOTE: In some situations a button of a certain setting might be greyed out. In that case the setting cannot be controlled manually. The camera itself can still change it though and its value will be reflected in real-time.

MANUAL SETTINGS

Manual mode

When the manual setting's button pressed, the corresponding setting is switched to a manual mode. The value of a setting in that case can be changed using a value selector (stepper) bellow the setting buttons.

Manual mode:

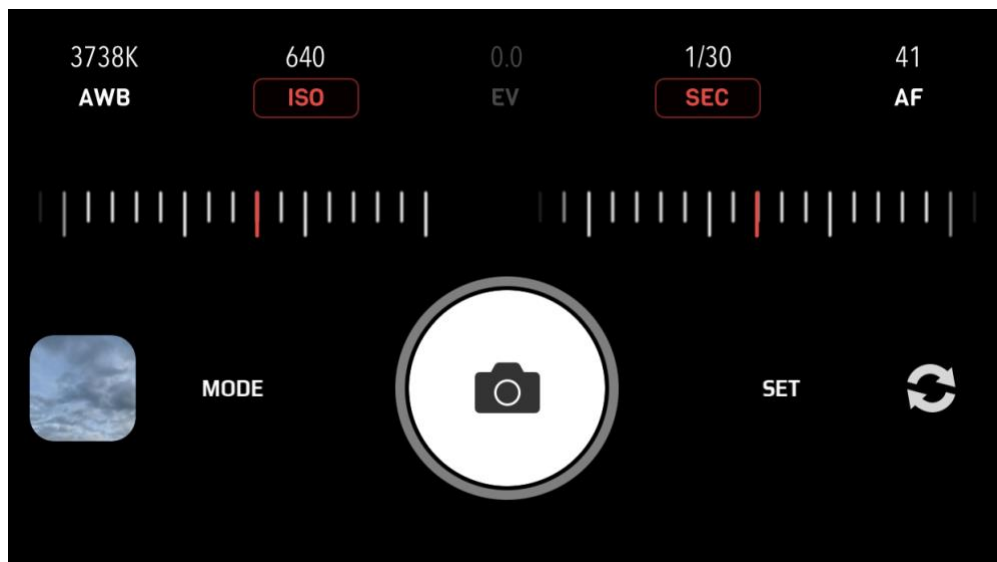

NOTE: To reset a setting to auto mode double tap on its button. The setting you want to reset needs to be selected first.